

# START - SMART

## Sealed Keypad Code--RFID Ignition Systems



**SSD-215**



**SSD-RFID-215**



**SSM-215**

### Features:

- NO KEYS!! Never forget your keys again---**START** + **STOP** directly from keypad!
- Easy installation to any make or model vehicle--to ignition switch + power
- Code or **HID--RFID** card enabling ---keep untrained operators off your equipment
- Small profile design--fits easily to any dash---no exposed cables
- Keypad sealed and potted to tough, abusive, outdoor applications
- Program in-out user codes/card from keypad or through USB interface (1000+ users)
- Auxilliary inputs for low oil, high temp, seat or seat belt switch, etc.
- Programmer or supervisor can lock out all operators until re-enabled
- All events are time + date stamped and can be downloaded from USB port

**3 Models:** All kits include keypad and 12-24 VDC dual relay module (converter for 36-48VDC)

**SSD-215** Duraswitch sealed + potted keypad with aluminum enclosure

**SSD-HRFID-215** Duraswitch sealed + potted keypad with HID RFID reader inside

**SSM-215** Metal piezo sealed aluminum keypad with potted aluminum enclosure

### Benefits:

- ANTI-THEFT wireless relay option prevents "hot wiring" and theft
- Keys not needed. Programmable code-card expire date
- Prevents other contractors from using your equipment
- Event logging shows daily usage start-stop times
- Event logs make drivers accountable for usage
- Extremely reliable----heavy duty construction



**Applications:** Installed quickly onto any gas, LPG, diesel or electric machine  
Construction equipment, forklifts compressors, pumps or generators.

# EQUIPMENT SAFETY DEVICES



# NO training---NO code---NO start---NO keys---NO theft!

## How it works

- \* Driver enters valid code or RFID card
- \* Driver presses **START** key to start engine
- \* Driver presses **STOP** key to stop engine
- \* Times out in 1 min after **STOP** pressed
- \* Driver can restart without code in 1 min
- \* All events are time/date stamped
- \* Event log is downloaded from USB port



### Anti-theft wireless relay option:

Wireless relay installed in ignition, fuel or starter circuit  
Automatically enabled by keypad after valid code accepted  
Once enabled, engine can be started by pressing **START**  
Thief **MUST** circumvent wireless relay to start engine  
Completely prevents "hot wiring" type theft

### Specifications: All START-SMART models

**Supply voltage:** 12--24VDC --MUST specify!  
(converter for 36-48VDC)

**Stand by current:** 30mA

**Temp range:** -40 - 185F (-40 - 85C)

**Size:** 89mmX75mmX20mm (3.5" X 3" X .75")

**SSM metal keypad approval:** ISO9000--CE--RoHS

**Wireless relay option:** 12 or 24VDC (must specify)


**Max relay contact current:** peak 30A

**Tested for:** High + Low temp shock  
Overvoltage reliability  
High shock reliability  
Vibration reliability  
Condensation, salt spray reliability

**RFID card reader:** HID Prox

**USB connector cable:**

2.3m 7.5' long

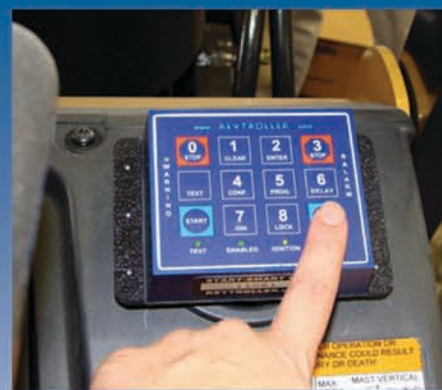

### Model: SSD-215

Outdoor sealed Duraswitch keypad  
Code only (4--5--6 digits)



### Model: SSD-HRFID-215

HID-RFID card reader--Duraswitch  
Accepts codes or HID cards



### Model: SSM-215

Outdoor sealed metal piezo keypad  
Code only (4--5--6 digits)



### All kits include:

- 1) Outdoor sealed keypad--completely potted
  - 1) Dual wired relay module (starter + ignition)
  - 1) Auxiliary connections (oil, temp, seat, seat belt, etc)
  - 1) USB port for program + download event logs
- Optional: Anti-theft, wireless relay  
Voltage converter for 36--48VDC

Distributed by:

